

# Teak Life Wood Wash/Wood Lightener: restores bare weathered teak by removing dirt, contaminants and UV damaged wood fibres, leaving a clean, natural-looking wood surface.

## FEATURES

- Restores weathered teak
- Removes dirt and discoloration
- Removes UV damaged fibre
- Creates clean natural wood surface
- For use on bare wood

## FORMULAS

**Teak Life Wood Wash** restores weathered grey or blackened teak surfaces prior to application of Teak Life wood protection formulas. Wood Wash is ready to use but may be reduced with up to 2 parts water for lightly stained or mildly soiled teak.

**Wood Lightener** can be used to help restore the color of new teak.

## CONDITIONS OF SALE

The only obligation of the manufacturer and seller shall be to replace such quantity of Teak Life product that is proven to be defective. Proof of purchase is required. Seller or manufacturer shall not be liable for any loss or damage connected with the use and/or handling of this product. All labor costs are specifically excluded. User should determine suitability of product for the intended use before application. User assumes all risk and liability in connection therewith. This warranty is expressly made in lieu of any and all other rights, warranties, conditions and remedies, express or implied, including but not limited to any implied warranty or condition of merchantability, fitness for a particular purpose, and any warranty or condition arising out of a course of dealing, a custom or usage of trade. If any distributor or seller of product offers warranties or remedies which differ from those offered by Teak Life, Teak Life accepts no responsibilities for such warranties or remedies.

## CHARACTERISTICS - TEAK LIFE WOOD WASH

- Coloring ..... Blue/Green
- Odor ..... Low
- Form ..... Liquid
- Specific Gravity (g/cm<sup>3</sup>) ..... 1.00-1.02
- Density (lbs/gal) ..... 8.30- 8.40
- pH ..... 12.5-13
- Viscosity, @Zahn 2 @21°C ..... 26-30 sec
- Solvents ..... N/A
- Freezing Point ..... 0°C
- Diluent ..... Water
- Cleanup ..... Soap & Water
- Drying Time (To touch) @ 20°C (68°F) ..... Do not allow to dry
- Coverage (Depending on coating appearance and thickness) ..... 100-200 sq.ft./US Gal
- Shelf life ..... Loses strength slowly over time
- Solids ..... < 3%
- VOC(g/L) ..... < 1 g/L

## CHARACTERISTICS – TEAK LIFE WOOD LIGHTENER

- Coloring ..... Transparent Orange
- Odor ..... Low
- Form ..... Solid
- Specific Gravity (g/cm<sup>3</sup>) ..... 1.00 -1.02
- Density (lbs/gal) ..... 8.30 - 8.40
- pH ..... 2.5- 3
- Viscosity, @Zahn 2 @21°C ..... 16sec+/- 1sec
- Solvents ..... N/A
- Freezing Point ..... 0°C
- Diluent ..... Water
- Cleanup ..... Soap & Water
- Drying Time (To touch) @ 20°C (68°F) ..... Do not allow to dry
- Coverage (Depending on coating appearance and thickness) ..... 150 sq.ft./Gallon
- Shelf life ..... Loses strength slowly over time
- Solids ..... < 5%
- VOC(g/L) ..... < 1 g/L

## PACKAGING

Teak Life Wood Wash and Teak Life Wood Lightener are available in 2L containers.

## PREPARATION

### PREPARATION IS KEY TO A SUCCESSFUL PROJECT

- Substrate must be dry
- Temperature above 10°C (50°F)
- Protect bordering areas and other surfaces before and during application
- Do not allow this product to come in contact with metal, fabric, floor coverings or outdoor furniture
- TEST: Always test an inconspicuous area to ensure that Wood Wash/ Wood Lightener performance is adequate, provides desirable results and does not affect other materials it may come in contact with during use.

## APPLICATION METHODS - TEAK LIFE WOOD WASH

- Apply liberally and evenly using brush, roller or spray
- On vertical surfaces start at the bottom and work your way up



RINSE SURFACE WITH CLEAN WATER




APPLY USING A SOFT NYLON BRISTLE BRUSH



RESTORES  
TEAK

REMOVES  
DIRT

LOW  
VOC

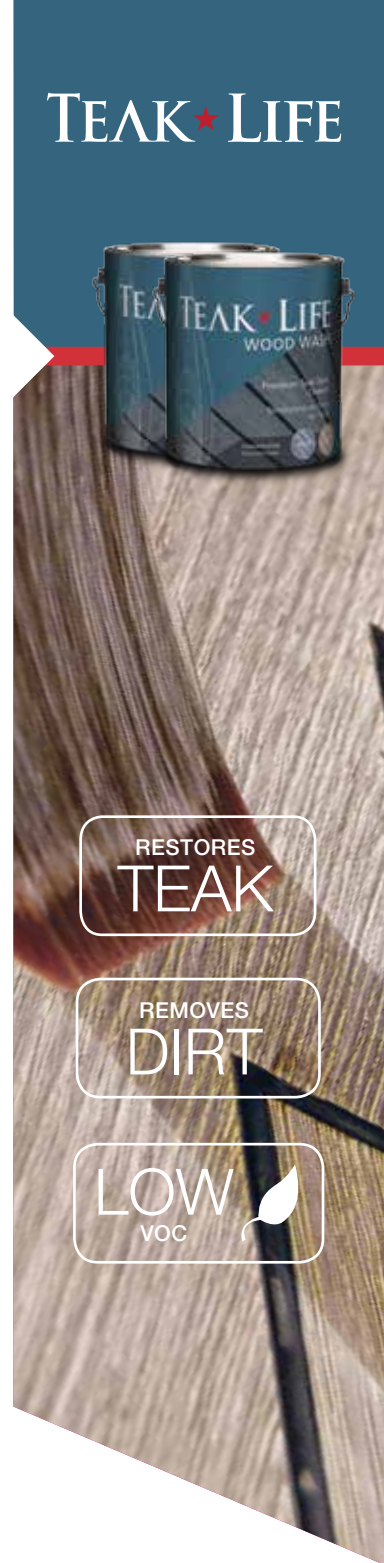



## WORKING PROCEDURE - TEAK LIFE WOOD WASH

---

- Do not allow to dry as this will require reapplication
- Lightly mist with water to keep active
- Do not apply in direct sunlight
- Allow the product to work for 5-10 minutes
- During waiting period you may agitate coating using a soft nylon bristle brush. Always agitate in direction of wood grain
- Thoroughly rinse the surface using a garden hose and agitate surface with brush while rinsing
- Allow the wood to dry completely
- To brighten the wood surface, proceed to Wood Lightener or thoroughly sand the wood in preparation for Teak Life treatment

## WORKING PROCEDURE - WOOD LIGHTENER

---

- Do not allow to dry as this will require reapplication
- Lightly mist with water to keep active
- Do not apply in direct sunlight
- Allow Wood Lightener to neutralize wood surface for at least 10 minutes
- Thoroughly rinse the surface using a clean fresh water
- Allow the wood to dry completely before proceeding to preparation for a Teak Life restorative treatment.

## WORKING PROCEDURE - SANDING

---

- On smooth surfaces, sand using a variable speed random orbital sander with 60-80 grit sand paper in preparation for your chosen Teak Life treatment

## STORAGE

---

- Close container tightly
- Store in a cool dry place
- Avoid exposure to sunlight
- Do not reuse container
- Do not allow freezing
- Rinse container thoroughly before disposal

## SAFETY

---

See Material Safety Data Sheets